


# INSTALLATION INSTRUCTIONS

## TYPICAL C<sup>3</sup> BALUSTRADE SYSTEM

### INSTALL MOUNTING HARDWARE:


- Lay out balustrade system to locate Newel Post centerlines.
- Fasten Anchor Blocks to substrate with approved fastening system (i.e. Hilti). Use gasket provided for cementitious substrates.
- Fasten Anchor Posts to Anchor Blocks using stainless steel fasteners provided.

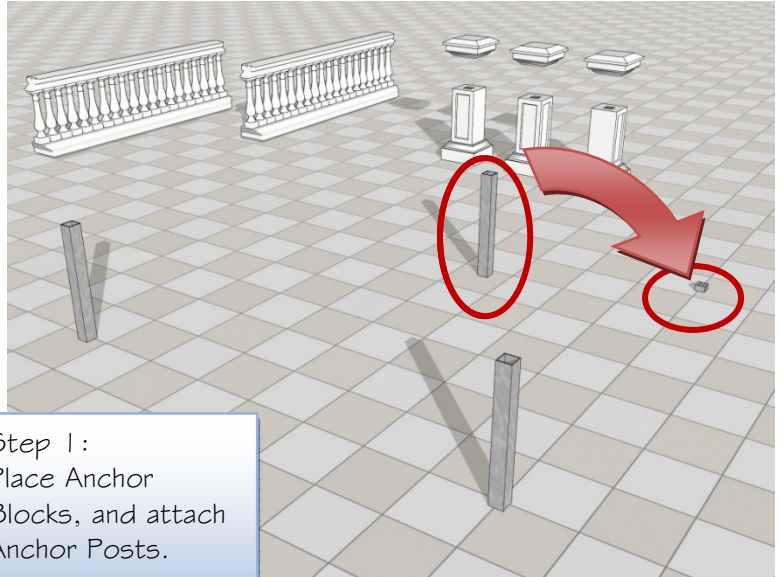

Step 1:  
Place Anchor  
Blocks, and attach  
Anchor Posts.

### PLACE NEWEL POSTS:

- Lower Newel Posts into place over Anchor Posts.
- Leave internal blocking loose.

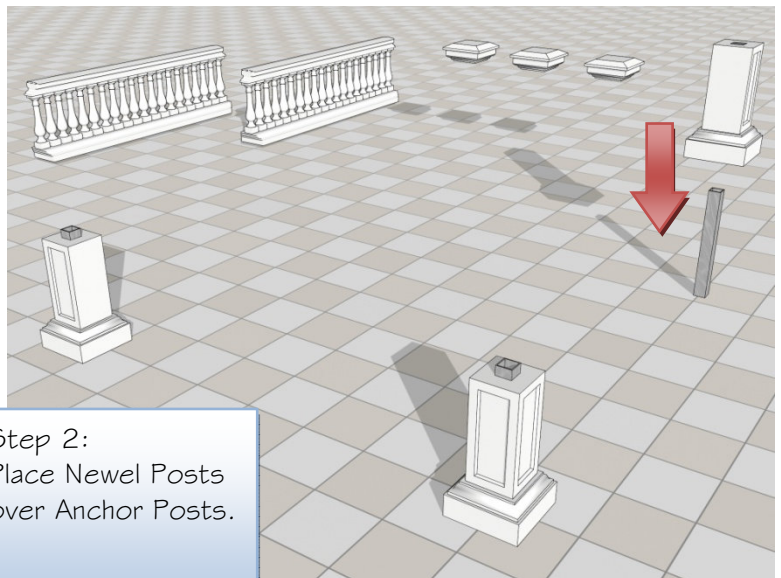

Step 2:  
Place Newel Posts  
over Anchor Posts.

68 East Dudley Town Rd  
Bloomfield, CT 06002


Tel: 1.800.676.8840  
Fax: 1.866.676.3188

[www.cheyennecompany.com](http://www.cheyennecompany.com)




**PLACE RAIL SECTIONS:**

- Lower Rail Sections into place over mounting blocks on Newel Posts (Spans over 8' may require a center support block)
- Fasten Rails in place with a Stainless Steel wood screw from inside the Newel Post.
- Fasten internal blocking inside Newel Posts.
- Fill or partially fill inside of Newel Posts with expanding urethane foam (i.e. Hilti).

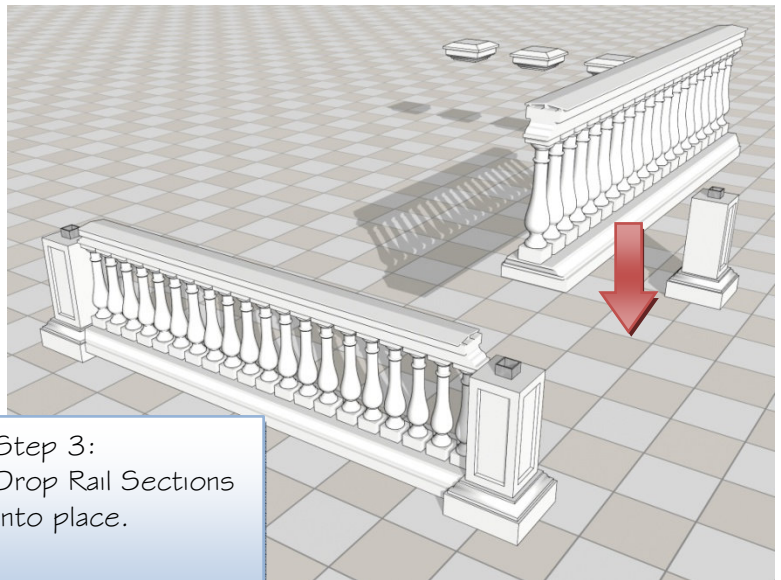

**PLACE POST CAPS:**

- Dry fit caps to Newel Posts
- Apply PLPremium adhesive to contact surfaces.
- Drop Cap into place.

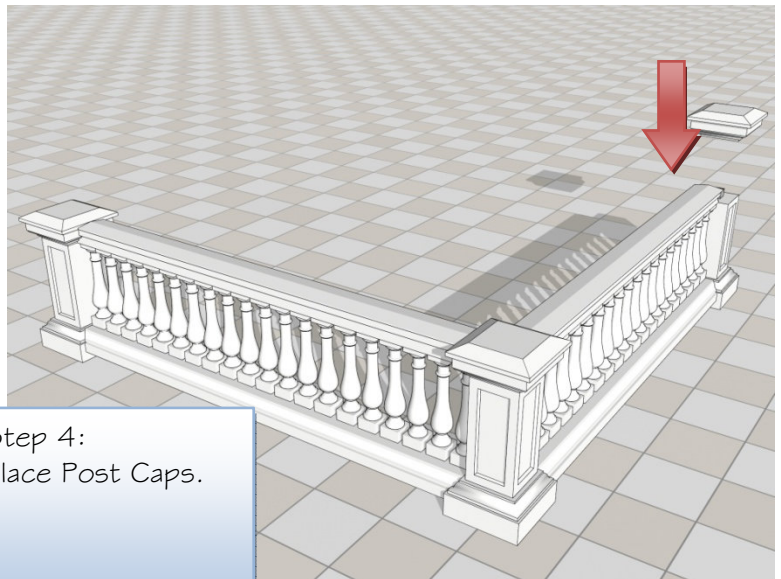

QUESTIONS? CALL TODAY TO DISCUSS YOUR CONCERNS!  
**1.800.676.8840**